

Basic Pump Usage Instructions.

Make sure there is fuel in the pump.

Screw green pipe to Inlet and blue 'lay flat hose' to outlet




Connect the blue pipe (numbered on pipe end) to get the desired length.

Make sure both hoses have the rubber washer in the connector.




Make sure the Blue hose is flat not twisted.

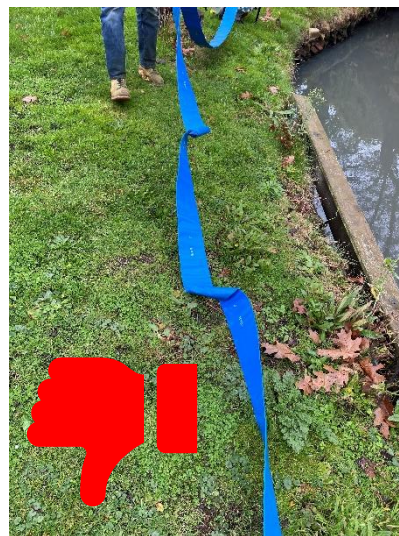

Place blue pipe in designated outlet location

Village in ditch in Orford Road

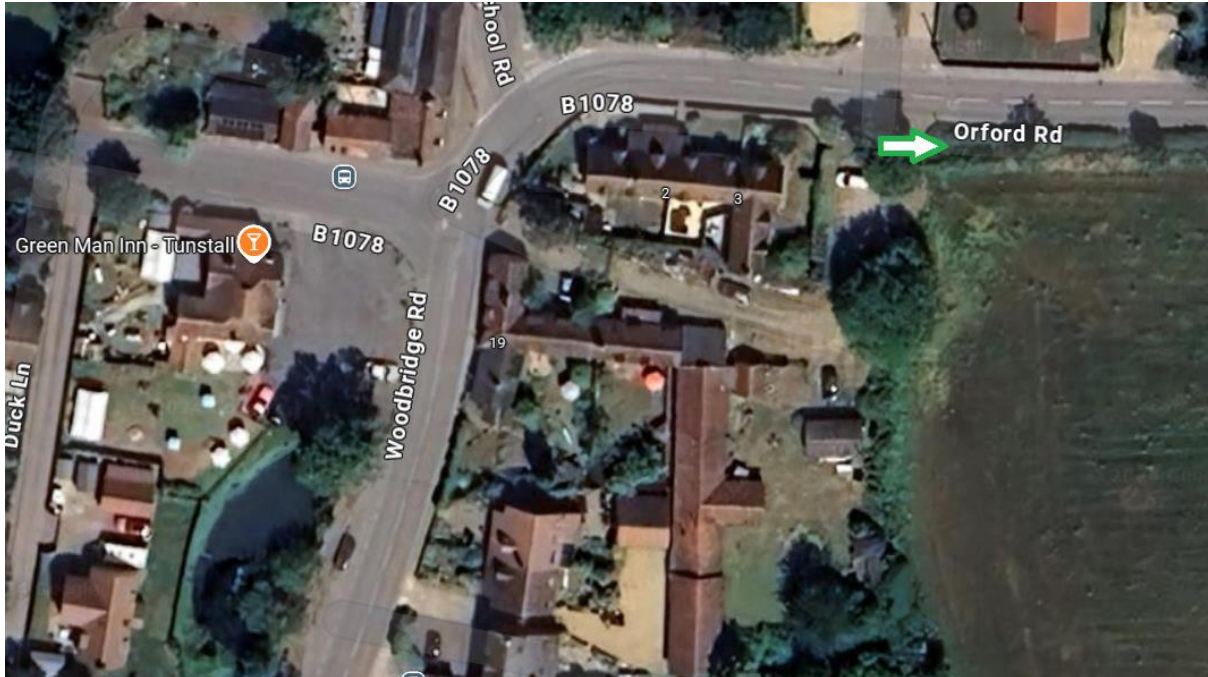

To the left of the road past all houses on the right.




Prime the Green Suction/Intake pipe and the pump itself. Prime Fully and please ensure both are full of water as the pump will not work if there is a lot of air in the system.



Make sure Prime plug is back in place prior to use.

Make sure pump intake stays submerged.

When all pipes connected and green hose and pump full of water. Turn on pump.

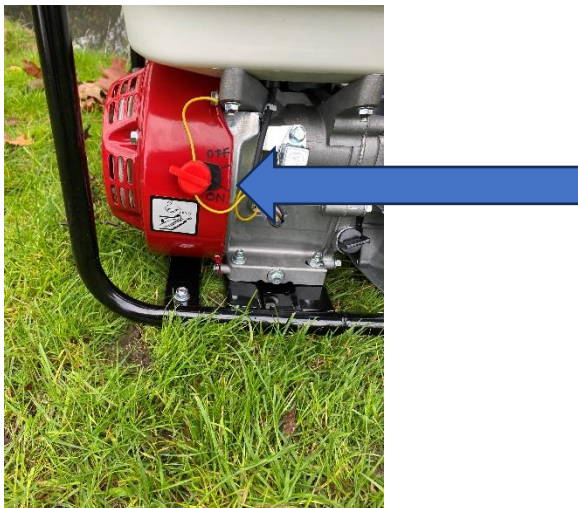


Turn Fuel to ON

Push Choke to Left


Open Speed lever to half

Then Pull Cord to start engine on pump.

Push Choke to right until engine runs smoothly

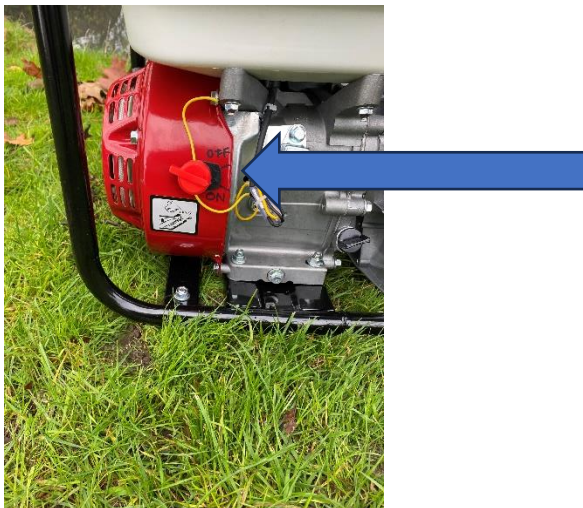

Once finished turn off pump to stop.

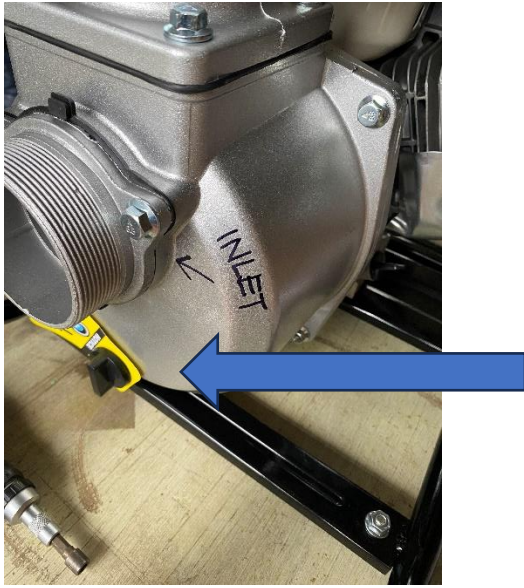

Drain the pump

Roll up pipes and return to store



Items needed/ in store

Pump

Watering can (Priming pump)

Green Inlet Pipe

Flood warning sign

Blue outlet Hoses

Jerry Can (fuel)